


# VERSITRIM LIGHTNING ROD BRACKET

## INSTALLATION INSTRUCTIONS

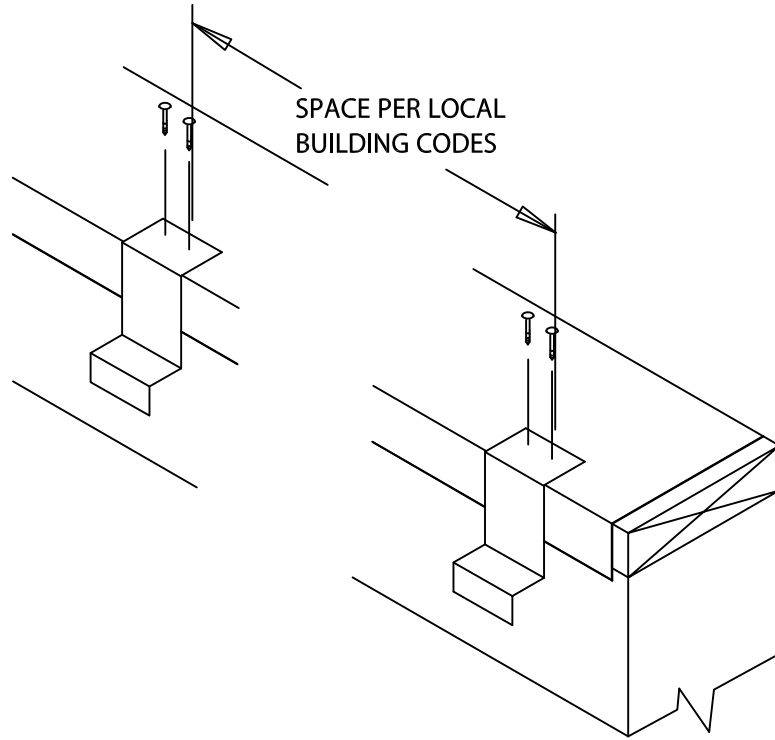

LOCATE AND FASTEN LIGHTNING ROD BRACKETS TO INSIDE FACE OF WALL PER LOCAL BUILDING CODES WITH APPROPRIATE FASTENERS FOR SUBSTRATE.

NOTE: BRACKETS MUST BE INSTALLED PRIOR TO COPING INSTALLATION!

### TYPICAL BRACKET INSTALLATION

