


# VERSITRIM LIGHTNING ROD BRACKET

STYLE 2


## INSTALLATION INSTRUCTIONS

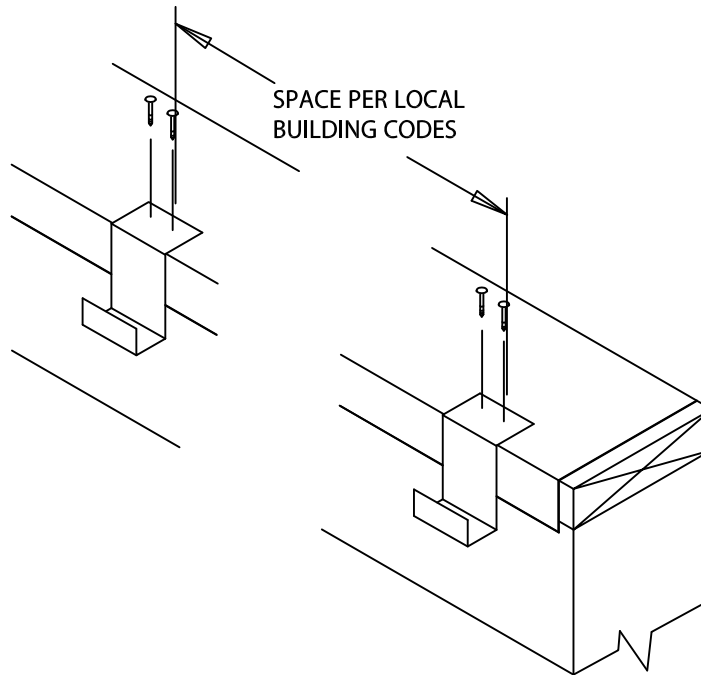

LOCATE AND FASTEN LIGHTNING ROD BRACKETS TO INSIDE FACE OF WALL PER LOCAL BUILDING CODES WITH APPROPRIATE FASTENERS FOR SUBSTRATE.

NOTE: BRACKETS MUST BE INSTALLED PRIOR TO COPING INSTALLATION!

### TYPICAL BRACKET INSTALLATION

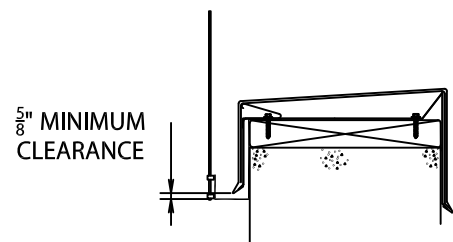

PROJECT:

ARCHITECT:

ROOFING CONTRACTOR:

REPRESENTATIVE/DISTRIBUTOR:

Customer Service  
800-558-2162  
(Metal-Era)



DATE: 11/17/24

DRN BY: MLM

CKD BY: MM

SHT.# \_\_\_ OF \_\_\_

DWG# 18118-20923

**B**