


/ersitrim drip ed

TPO OR PVC VERSION WITH CONTINUOUS CLEAT


INSTALLATION INSTRUCTIONS

NOTE: INSTALL MITERS FIRST

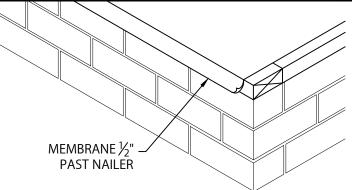


1. ROOF MEMBRANE


POSITION MEMBRANE OVER THE ROOF EDGE AND DOWN OUTSIDE FACE OF WALL, COVERING WOOD NAILER(S) COMPLETELY. ALLOW 1/2" EXCESS MEMBRANE.

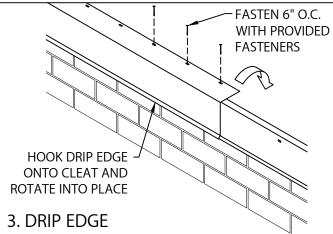


HOOK DRIP EDGE OF EACH DRIP EDGE SECTION ONTO CONTINUOUS CLEAT, ROTATE INTO PLACE. FASTEN THRU PRE-SLOTTED HOLES 6" WITH PROVIDED FASTENERS.

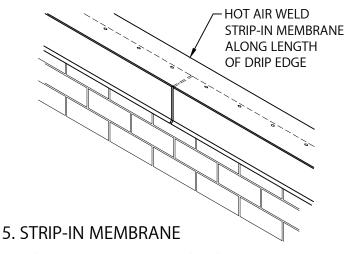


HOT AIR WELD STRIP-IN MEMBRANE ALONG ENTIRE LENGTH OF DRIP EDGE PER MANUFACTURERS INSTRUCTIONS.

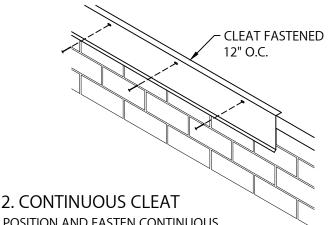

POSITION AND FASTEN CONTINUOUS CLEAT 12" O.C. THRU PRE-SLOTTED HOLES AS SHOWN WITH PROVIDED FASTENERS. LAP CLEAT 1" AT JOINTS.

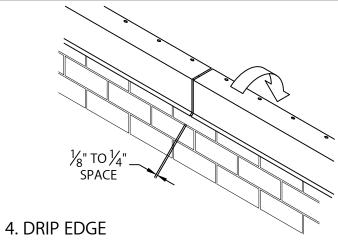

CONTINUE INSTALLING LENGTHS OF DRIP EDGE. LEAVE A $\frac{1}{8}$ " TO $\frac{1}{4}$ " SPACE BETWEEN PIECES.

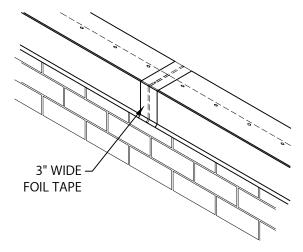

6. FOIL TAPE AT JOINT

PLACE A 3" WIDE PIECE OF FOIL TAPE OVER JOINT.



Customer Service 800-558-2162 DATE: 11/14/24 DRN BY: MLM

CKD BY: MM

DWG# 18110-25806

SHT.#_1 OF 2




VERSITRIM DRIP EDGE


TPO OR PVC VERSION WITH CONTINUOUS CLEAT

NOTE: INSTALL MITERS FIRST

INSTALLATION INSTRUCTIONS

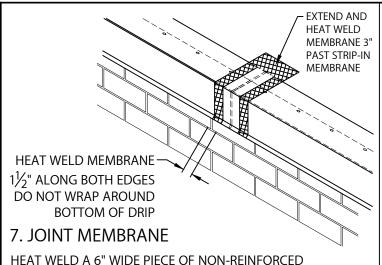


MEMBRANE OVER JOINT AS SHOWN ABOVE.

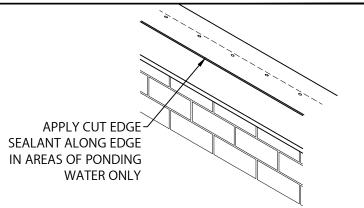

8. SEALANT

APPLY CUT EDGE SEALANT ONLY TO EDGES WHERE PONDING OCCURS.

TYPICAL INSTALLATION

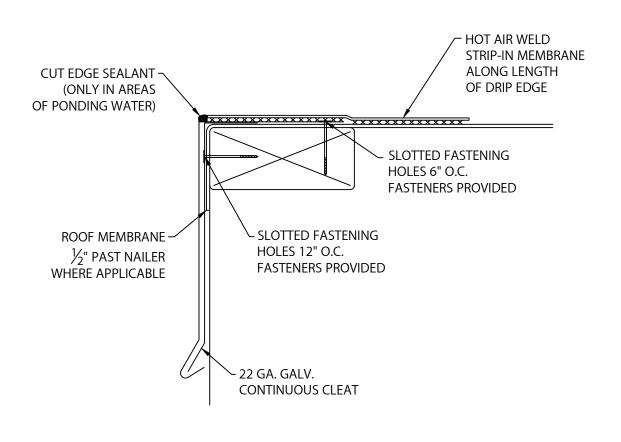



Customer Service 800-558-2162

DATE: 11/14/24
DRN BY: MLM

CKD BY: MM

SHT.#_2_OF_2

DWG# 18110-25806

, | **L**