


SECUREDGE LIGHTNING ROD BRACKET

STYLE 1


INSTALLATION INSTRUCTIONS

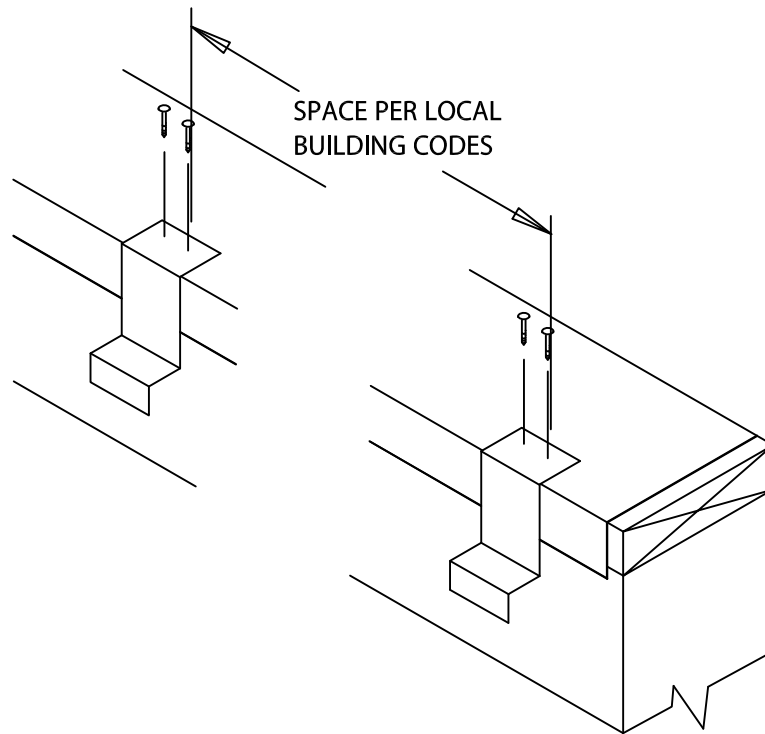

LOCATE AND FASTEN LIGHTNING ROD BRACKETS TO INSIDE FACE OF WALL PER LOCAL BUILDING CODES WITH APPROPRIATE FASTENERS FOR SUBSTRATE.

NOTE: BRACKETS MUST BE INSTALLED PRIOR TO COPING INSTALLATION!

TYPICAL BRACKET INSTALLATION

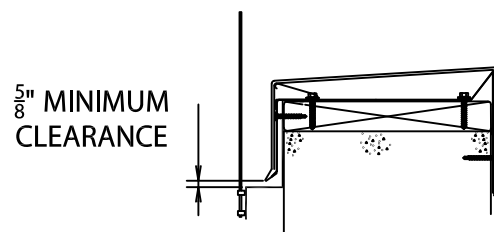

Customer Service
866-458-3537
(Metal-Era)

DATE: 11/12/24
DRN BY: MLM
CKD BY: MM

SHT.# ___ OF ___
DWG# 15118-38272

C